

#### SPECIFICATIONS

- 12/24V DC power supply
- Ignition activated display
- 3 wire digital multiplexed communications system
- Multi channel capabilities with AUTO-ID® and AUTO-CAL® for interoperability
- Used with air or hydraulic pressure transducers and load cells in any combination
- Dual calibration for lift axles and sliding turntables
- INS-COM® Software (**IN** Service **COM**pliance) for
  - ◇ Road friendly suspension testing, and
  - ◇ Last mile access monitoring

#### OPERATOR DISPLAY

- Dual line LCD backlit display for day/night operation
- Weight displayed in 10,20, or 50 Kg increments
- Load monitoring and Prof of Delivery
- Time and Date records
- Overload alarms
- In-built diagnostics
- User friendly, compact, push button operation
- Digital calibration
- Password Protection

#### OPTIONS

- GPS/GPRS interfaces
- In-cabin or external printers
- Barcode and RFID tag readers
- Vehicle and driver I.D's
- Hand held Remote weight displays
- Android phone applications
- Bluetooth communications

#### TYPICAL CONFIGURATIONS

- Rigid trucks, dog trailers, prime movers, semi trailers, B-double, A-double, B-triple, AAB-quad etc....
- Crane scale weighing system
- Weighing systems for the waste industry
- Weighbridge systems (Single or Multi platform)
- Customisation to suit user requirements

## Our Team is Ready to Assist

We understand that choosing the right system for you and your vehicle can be time consuming.

### *Our team would love to help.*

If you are interested in learning more about our products, a no-obligation free quote, or just discuss a purchase or a service; please contact us.



## PROVEN STRENGTH



***Since 1975***

#### CONTACT DETAILS

**Phone:** +61 7 3892 2311

**Fax:** +61 7 3892 1819

**Email:** [info@tramanco.com.au](mailto:info@tramanco.com.au)

**WWW:** [www.tramanco.com.au](http://www.tramanco.com.au)



**AUSTRALIAN DESIGNED & MANUFACTURED BY**





## ELECTRONIC SCALES

**Tramanco's** Australian designed and manufactured **CHEK-WAY® Eliminator** series of electronic on-board scales and weighbridges allows you to accurately acquire the necessary information to:

- Improve Productivity and Profitability
- Invoice correctly — no lost loads
- Avoid errors with pick-ups and delivery P.O.D
- Print out option for pick-up and/or delivery
- Avoid being under loaded or incorrectly loaded
- Reduce paperwork and human error
- Reduce expense and lost time at public weigh bridges
- Immediate on-board quality assurance
- Fully certified to ISO 9001
- Complies with all current PBS/HML recommendations
- AUTO-ID® and AUTO-CAL® Software for interoperability
- Reduce Chain of Responsibility exposure immediately
- Tamper evidentiary data for compliance purposes

**CHEK-WAY® Eliminator** communicates with other devices, such as:

- On-board computers
- Barcode readers
- RFID tag readers
- Android phones and tablets
- Transponder systems
- GPS and GPRS systems

**Remember,** You can not manage what you do not know.

**Remember,** Lost paper work presents a time consuming problem.

**Remember,** You now have the answer within your grasp.


**Remember,** The future in weighing is here now!



**CHEK-WAY® Eliminator Display Unit**  
As configured for a B-Double Truck and Trailers

Choose **CHEK-WAY® Eliminator** for the latest weighing solutions for:

- Trucks & Trailers
- Weighbridges
- On-Off Highway
- Agricultural Applications
- Mining Industry
- Waste Collection Industry
- Truck mounted Cranes and Side-loaders

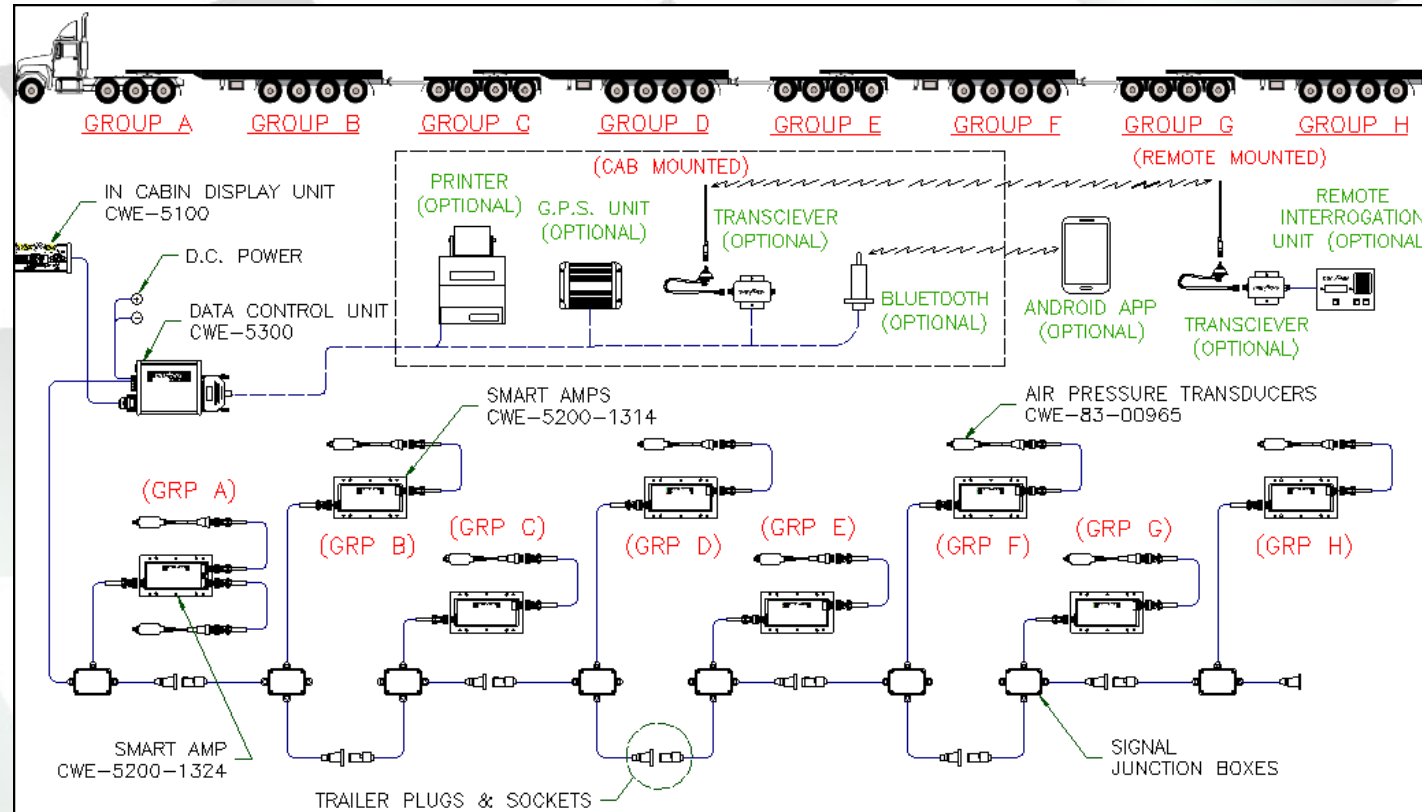

**Typical eight channel CHEK-WAY® Eliminator configuration**



As seen on  
**ABC Television**  
*The New Inventors*  
Winner Episode 26 July 2009

**Remember,** one WEIGH

or the other, it's

